

ACU-RITE



Digital Readouts

Linear Encoders

For Manually Operated
Machine Tools

Digital readouts from ACU-RITE make your manually operated machine tools more profitable, improve productivity and raise the quality of the machined workpiece. The 7" TFT color flat panel display shows the actual axis position lucidly and clearly. The context-sensitive graphical user guidance makes working with digital readouts from ACU-RITE a pleasure.

Together with the linear scales from ACU-RITE they form an economic and effective package solution for initial setup or retrofitting on your machine tool.



Contents

Digital readouts		
Selection guide		4
Functions	Installation guide (DRO 203, DRO 300)	6
	Probing functions for presets (DRO 300)	6
	Tool compensations (DRO 203, DRO 300)	6
	Distance-to-go display (DRO 100, DRO 203, DRO 300)	7
	Dynamic zoom (DRO 203, DRO 300)	7
	Hole patterns (DRO 203, DRO 300)	8
	Programming of machining steps (DRO 300)	8
	Assistance for working with lathes (DRO 203, DRO 300, DRO 303)	9
Specifications	DRO 100 – Simple digital readout for one, two, or three axes.	10
	DRO 203 – Versatile digital readout for up to three axes	12
	DRO 300 – Programmable digital readout for three or four axes	14
Accessories	Edge finder	16
	Mounting components	17
	IOB 610 external input/output unit for DRO 300	19
Interfaces		21
Linear encoders		
Linear encoders	– For manually operated machine tools	22
Mounting instructions		23
Specifications	SENC 50 – Compact linear encoder for limited installation space	24
	SENC 150 – Standard linear encoder	26
Interfaces	Incremental signals \square TTL	28
Electrical connection	Cable	29
	General electrical information	30

Selection guide

	Number of axes	Reference points/ Tool data	Functions
DRO 100 Digital readout for general applications with up to three axes <ul style="list-style-type: none"> • 7" TFT color display • Splash-proof membrane keyboard 	1, 2 or 3	1 datum	<i>General:</i> <ul style="list-style-type: none"> • Absolute/incremental display • mm/inch switching <i>Turning:</i> <ul style="list-style-type: none"> • Radius/diameter display
DRO 203 Digital readout for milling, drilling and boring machines, as well as for lathes with three axes <ul style="list-style-type: none"> • 7" TFT color display • Splash-proof full-travel keyboard 	Up to 3	10 datums 16 tools	<i>General:</i> <ul style="list-style-type: none"> • Distance-to-go display with graphic positioning aid <i>Milling and drilling:</i> <ul style="list-style-type: none"> • Probing function using tool • Tool radius compensation • Hole patterns (circular and linear patterns) <i>Turning:</i> <ul style="list-style-type: none"> • Radius/diameter display • Separate/sum display
DRO 300 Digital readout for milling, drilling and boring machines, as well as for lathes with up to three axes <ul style="list-style-type: none"> • 7" TFT color display • Program memory • Splash-proof full-travel keyboard • Switching inputs/outputs (via IOB 610) 	Up to 4	10 datums 99 tools	<i>General:</i> <ul style="list-style-type: none"> • Distance-to-go display with graphic positioning aid • Program memory for up to 8 programs with 250 steps each <i>Milling and drilling:</i> <ul style="list-style-type: none"> • Probing functions for KT edge finder • Tool radius compensation • Hole patterns (circular and linear patterns) <i>Turning:</i> <ul style="list-style-type: none"> • Taper calculator • Radius/diameter display • Separate/sum display



Encoder inputs	Switching inputs/outputs	Data interface	Models	Page
□ TTL	–	USB Type C	DRO 101, DRO 102, DRO 103	10
□ TTL	–	USB Type C	DRO 203	12
□ TTL	For KT edge finder; additional ones via IOB 610	USB Type C	DRO 303, DRO 304	14




Functions

- Installation guide (DRO 203, DRO 300)
- Probing functions for presets (DRO 300)
- Tool compensations (DRO 203, DRO 300)

Installation guide

At first switch-on, an installation guide will guide you step by step through the configuration of the unit. During this procedure, you can select the connected encoder directly from a list and thereby adopt all of the encoder parameters. It only takes a few moments to configure the basic functions of the digital readout. You can then separately configure further settings such as scaling factor, error compensation, etc.

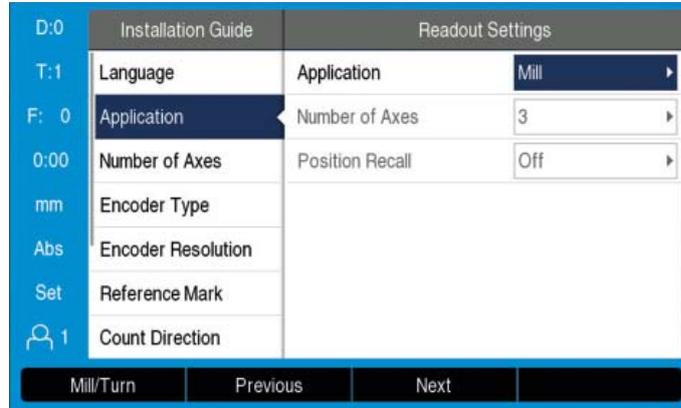

Easy setup with probing functions

A very useful accessory for datum setting is the HEIDENHAIN KT edge finder. Simply move the edge finder toward a side of the workpiece until the stylus deflects. The digital readout stores the exact position on its own and automatically takes into account the direction of approach and the radius of the stylus or the tool. For this purpose, the digital readout provides the following probing functions:

- Workpiece edge as reference line
- Workpiece centerline as reference line
- Circle center as datum

Tool compensation for milling machines


The ACU-RITE digital readouts save tool data in a tool table (i.e., diameter and length of the tool used). The data can come from preset tools or be measured on the machine.

When positioning in distance-to-go mode, the readouts take the tool radius ($R+$ or $R-$) in the machining plane into account and consider the tool length (ΔL) in the spindle axis.


Determining and storing tool compensation values on lathes

You can store the data for the tools you insert in the turret or quick-change holder in the tool table:

- Enter the tool position directly when turning the first diameter, or
- "freeze" the current axis position value, retract the tool, measure the turned diameter and then enter that value.

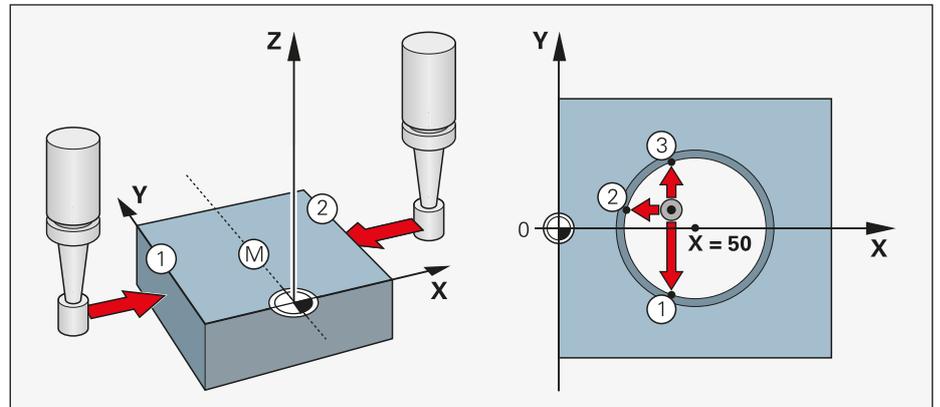


Convenient datum setting with an edge finder

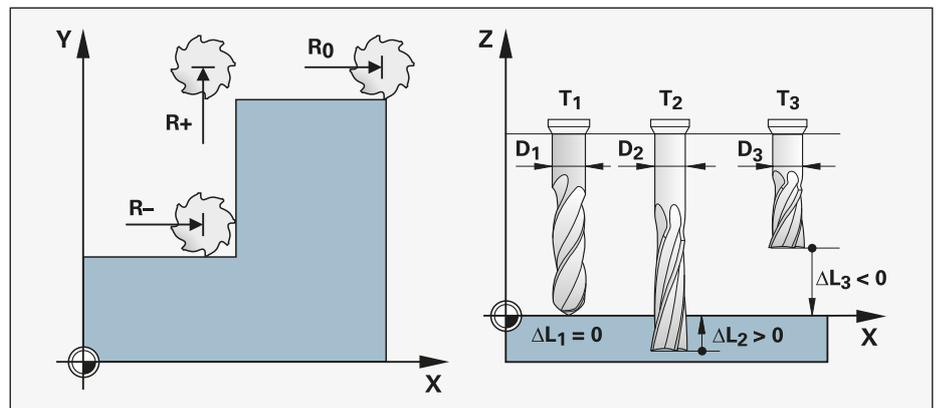

Compensation of tool radius and length

Changing the datum

If you change the workpiece or a datum, then you can set a new preset. The tool data are then automatically referenced to the new datum and do not need to be changed.

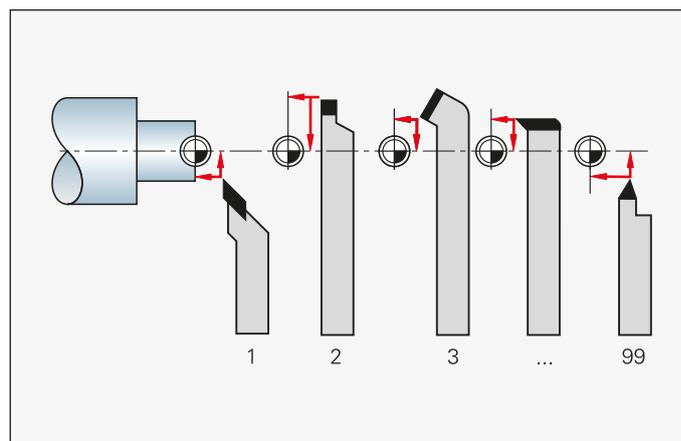


- Distance-to-go display (DRO 100, DRO 203, DRO 300)
- Dynamic zoom (DRO 203, DRO 300)


Distance-to-go display for turning and milling

The distance-to-go display feature simplifies your work considerably: you enter the next nominal position, and the display shows you the distance remaining to the target position. This means that you simply move to the display value zero.

When you use the distance-to-go feature for milling, the digital readout can compensate for the milling radius. In this way you can directly use the drawing dimensions without having to do any conversions. You no longer have to remember any complicated values.

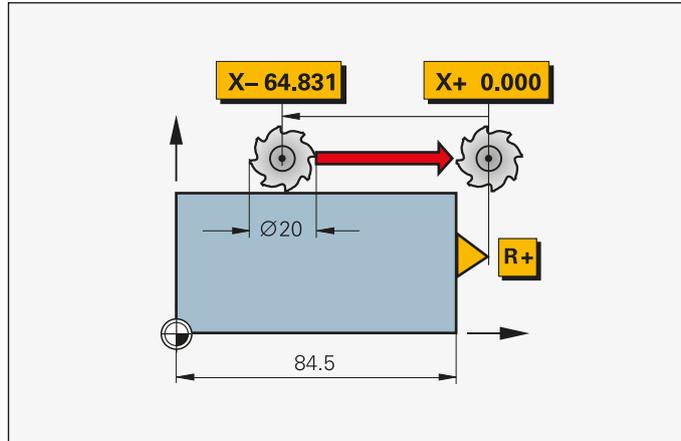


The distance-to-go display is enhanced by a "near zero" message: As you traverse to zero, a square cursor moves into a target fork. The "near zero" message is configurable for each axis.

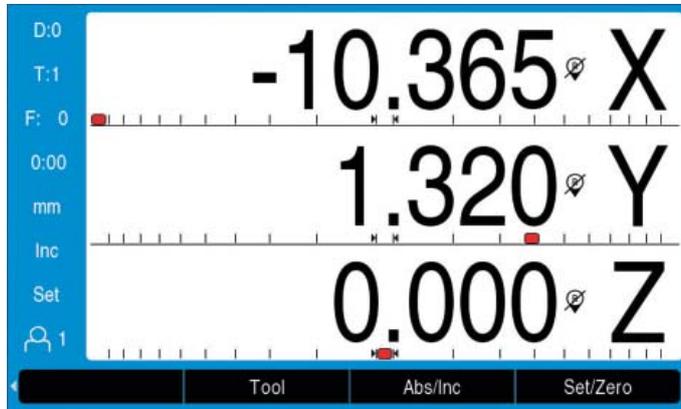

Dynamic zoom

The dynamic zoom feature offers a significant improvement in position value readability. Once activated, the display value for the axis currently being moved is maximally enlarged. This occurs in four steps depending on the number of digits in the respective numerical value. For small numbers (i.e., numbers close to zero), the character height can be increased from 17 mm (standard height) to 25 mm. The operator immediately sees which axis is currently moving and can also easily read the numerical value from a greater distance. When the axis stops moving, the display returns to its standard size after a second has elapsed.

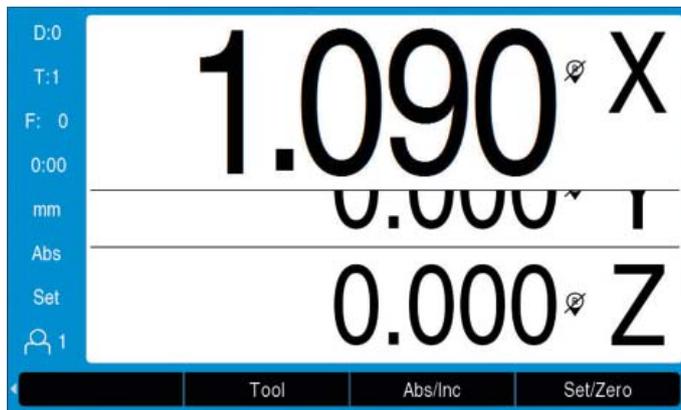


Functions

- Hole patterns (DRO 203, DRO 300)
- Programming of machining steps (DRO 300)

Automatic calculation of bolt hole patterns for milling and drilling

In milling machine mode, you can machine **circular hole patterns** (full circle or circle segments) and **linear hole patterns** without much calculation.

You simply enter the geometric dimensions and the number of holes from the drawing. The display calculates the coordinates of the individual holes in the working plane. You only need to traverse "to zero" and drill. The display then shows the next position. The **graphic display** is a particularly useful feature: it lets you verify your input for the programmed bolt-hole pattern before machining.

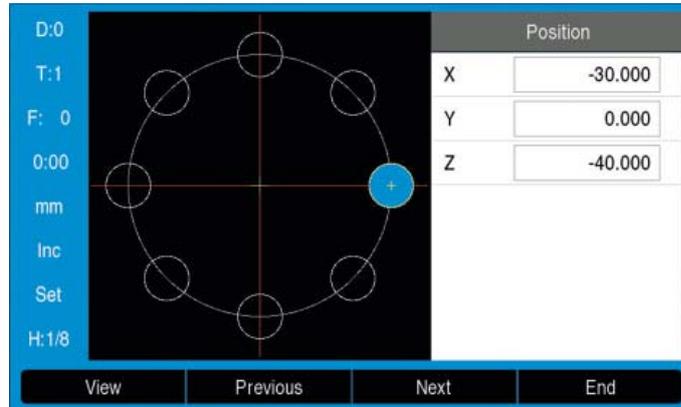

Programming machining steps

The programming functions of the DRO 300 allow you to save repetitive machining steps. For example, you can save all of the machining steps required for a small batch in the form of a program. In the RUN mode of operation, the distance-to-go display will guide you step-by-step to the programmed positions.

You create programs by typing in the positions step by step. The fixed cycles such as Bolt Hole Circle, Linear Hole Pattern, Incline Mill Form or Circular Arc keep your programs short and save you programming time. In the course of your work, the readout presents each nominal position in the proper sequence. You need only move from one position to the next.



– Assistance for working with lathes (DRO 203, DRO 300, DRO 303)

Radius/diameter display

In lathe mode, you can see the positions of the transverse axis in either radius or diameter values. You can switch at a keystroke.

Sum display of longitudinal axes

In lathe mode, the positions of the saddle and the top slide are displayed either separately or as the sum of both values.

- If you select **separate displays**, the position values are referenced to the datum for each individual axis. If only the saddle is moved, the displayed value for the top-slide axis remains unchanged
- If **sum display** is selected, the counter adds both values while taking the algebraic sign into account. You can thereby read the absolute position of the tool in relation to the workpiece datum without having to perform calculations.

• Vectoring

(DRO 203, DRO 300)

The vectoring function breaks down a movement into its longitudinal and crossfeed axis components. If you are turning threads, for example, vectoring lets you see the diameter of the thread in the X axis, even though you are moving the compound axis handwheel


Taper turning made easy

(DRO 203, DRO 303)

If taper dimensions do not include the angle, the integrated taper calculator will help you with the calculation. Simply enter the taper ratio or the two diameters and the length. The correct angle for the top slide will be displayed immediately.

Constant surface speed (DRO 300)

Particularly in taper turning or parting, the surface speed usually changes along with the diameter. But a constant surface speed is better for optimum machining results and long tool life. In conjunction with the IOB 610 output module, the DRO 300 digital readout therefore makes it possible to control a constant surface speed contingent on the current workpiece diameter.

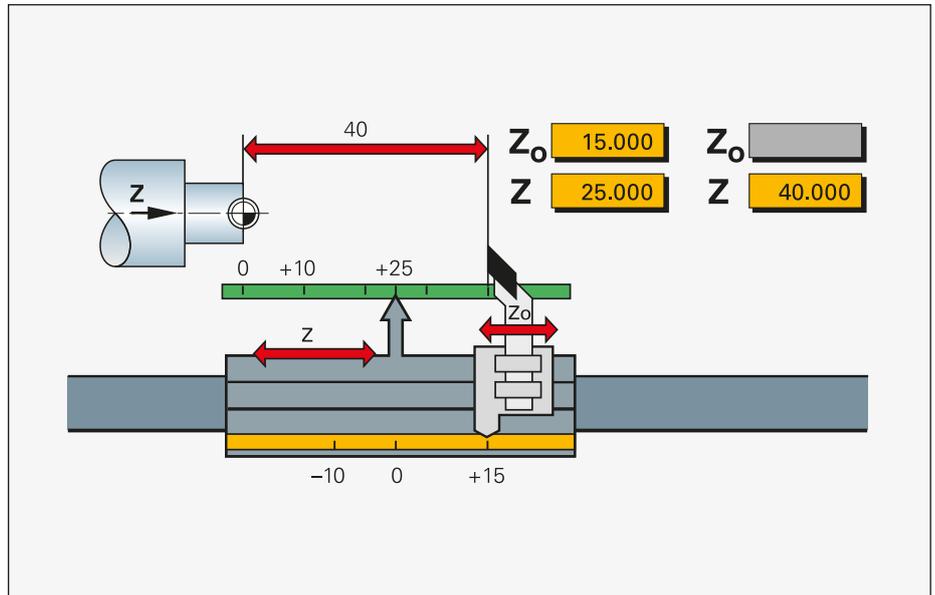

D:0	CSS/Direct rpm	Position
T:1	Mode CSS	X 0.000 Ø
S:0	Speed (m/min) 100	Z0 0.000
0:00	Gear Selection 2	Z 0.000
mm	Min rpm 100	Y 0.000
Abs	Max rpm 1000	
Set	Enter the desired surface speed.	
1		Help

DRO 100

– Simple digital readout for one, two, or three axes

The ACU-RITE DRO 100 digital readouts are well-suited for general applications on milling, drilling, boring, and lathe machines with one, two, or three axes.

Design



With its sturdy housing and splash-proof membrane keyboard, the DRO 100 is built for the workshop. The DRO 100 displays position values, status information, and additional useful data on a TFT color screen.

Functions

The most important functions are available quickly and directly via function keys. If the DRO 100 is connected to a lathe, then you can simply switch from radius to diameter display. For lathes with a separate top slide, the **sum display** feature on the 3-axis version of the DRO 100 allows you to display the saddle and top slides either together or separately.

Data Interfaces

A USB port enables the writing and reading out of data and files.

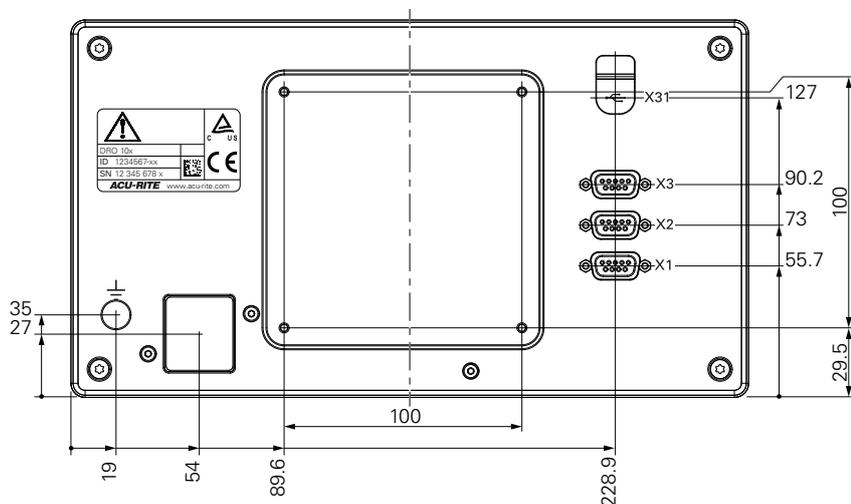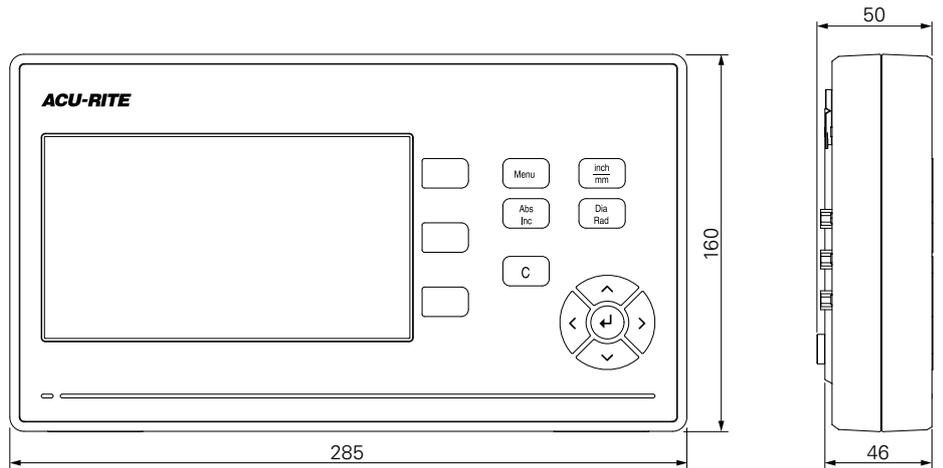

mm

 Tolerancing ISO 8015
 ISO 2768 - m H
 ≤ 6 mm: ±0.2 mm

DRO 100	
Axes*	1, 2 or 3
Encoder inputs	 TTL
Display step¹⁾	Adjustable, max. 7 digits <i>Linear axis:</i> 1 mm to 0.0001 mm <i>Rotary axis:</i> 1° to 0.001° (00° 00' 01")
Display	7" TFT color screen (15:9); resolution 800 x 400 pixels for position values and dialog
Status display	Freed rate, ABS/INC, mm/inch
Functions	<ul style="list-style-type: none"> • 1 datum • REF reference-mark evaluation for distance-coded or single reference marks • Distance-to-go mode • mm/inch switching • Absolute-incremental display • Integrated help function • Axis coupling • Radius/diameter display
Error compensation	Linear axis error
Data interface	USB connection, Type C
Optional accessories	Stand, holder for mounting arm, protective cover
Power connector	AC 100 V (-10 %) to 240 V (+5 %), 50 Hz to 60 Hz (±5 %), ≤ 33 W
Operating temperature	0 °C to 45 °C (storage temperature -20 °C to 70 °C)
Protection EN 60529	IP 40; front panel IP 54
Mass	1.6 kg

* Please select when ordering

¹⁾ Depends on the signal period of the connected encoder

DRO 203

– Versatile digital readout for up to three axes

The ACU-RITE DRO 203 digital readout is especially well-suited for use on milling, drilling, boring, and lathes machines with up to three axes.

Design

The DRO 203 digital readout is designed as a sturdy upright unit with splash-proof full-travel keypad for use in a workshop. It is equipped with a 7" TFT color screen for position values, dialog, input displays, graphic functions, and for a graphic positioning aid.



Functions

The DRO 203 digital readout is distinguished by its Klartext dialog guidance. The **distance-to-go display** facilitates positioning tasks. You approach the next position quickly and reliably by simply traversing until the display reads zero. The functions for the respective application are easy to activate via parameter input. Special functions are available for producing **hole patterns** (linear patterns and circular patterns).

You can easily switch between radius and diameter display when the position display is configured for turning. The digital readout also offers support for lathes with a separate top slide: the **sum display** feature allows you to display the saddle and top slides either together or separately. To set presets, simply touch the workpiece and **freeze the tool position**. Then retract and measure the workpiece with the tool out of the way.

Data interfaces

A USB port enables the writing and reading out of data and files.

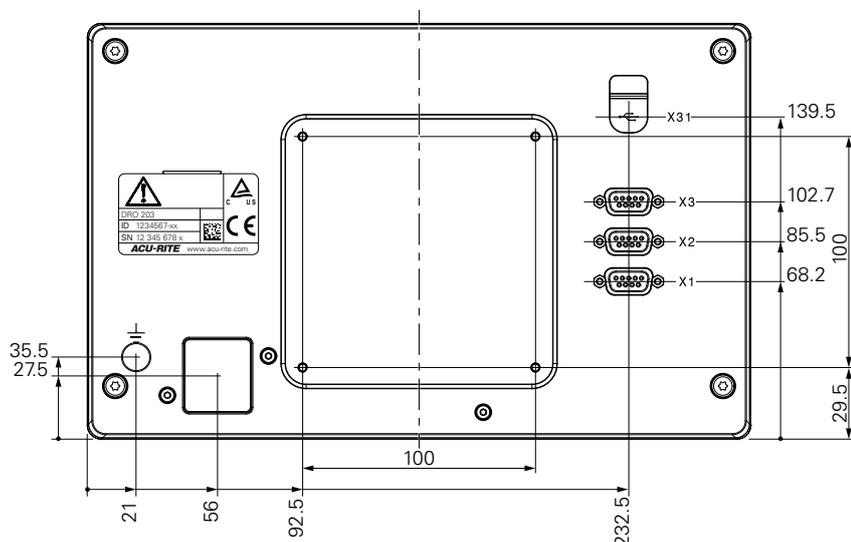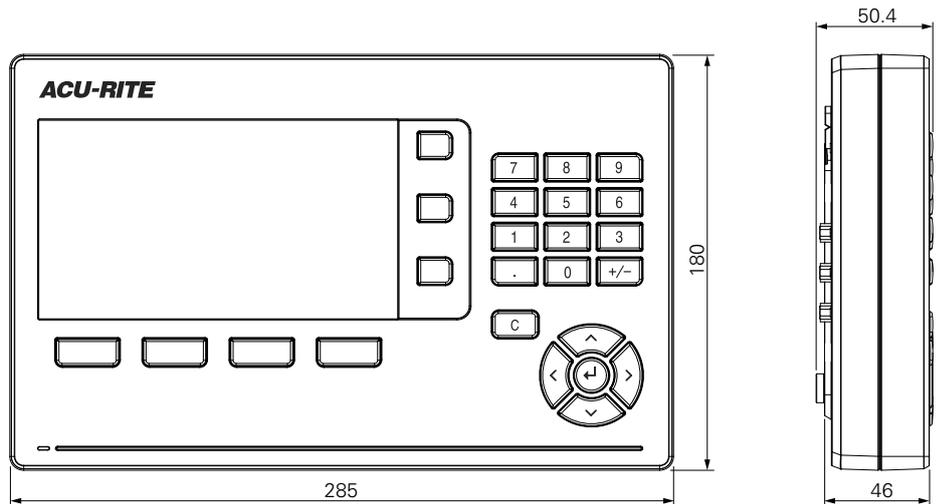

mm

 Tolerancing ISO 8015
 ISO 2768 - m H
 ≤ 6 mm: ±0.2 mm

DRO 203	
Axes*	2 or 3 (can be configured); various axis designations
Encoder inputs	□□ TTL
Display step¹⁾	Adjustable, max. 7 digits <i>Linear axis:</i> 1 mm to 0.0001 mm <i>Rotary axis:</i> 1° to 0.001° (00° 00' 01")
Display	7" TFT color screen (15:9); resolution 800 x 400 pixels for position values and dialog
Status display	Tool, reference point, operating function, feed rate, ABS/INC, mm/inch, stopwatch
Functions	<ul style="list-style-type: none"> • 10 reference points • 16 tools • REF reference-mark evaluation for distance-coded or single reference marks • Distance-to-go mode • Scaling factor • mm/inch switching • Absolute-incremental display • Integrated help function • Graphic positioning aid ("near zero" warning) • Calculator
For milling/drilling/boring	<ul style="list-style-type: none"> • Calculation of positions for hole patterns (bolt circles, linear hole patterns) • Tool radius and tool length compensation • Linear hole patterns, bolt hole circles
For turning	<ul style="list-style-type: none"> • Taper calculator • Radius/diameter switching • Freezing the tool position for back-off • Vectoring: X/Y display of the traverse path with inclined top slide • Sum display for Z and Z₀ (axis coupling)
Error compensation	<ul style="list-style-type: none"> • <i>Axis error:</i> Linear and multipoint over up to 200 points • <i>Backlash compensation:</i> for compensation of reversal error
Data interface	USB connection, Type C
Accessories	Stand, holder for mounting arm, protective cover
Power connector	AC 100 V (-10 %) to 240 V (+5 %), 50 Hz to 60 Hz (±5 %), ≤ 33 W
Operating temperature	0 °C to 45 °C (storage temperature -20 °C to 70 °C)
Protection EN 60529	IP 40; front panel IP 54
Mass	1.7 kg

* Please select when ordering

¹⁾ Depends on the signal period of the connected encoder

DRO 300

– Programmable digital readout for 3 or 4 axes

The ACU-RITE DRO 300 is a versatile digital readout designed primarily for milling, drilling, boring, and lathe machines with up to four axes. A separate I/O unit provides switching input/outputs for simple tasks in automation.

Design

Thanks to its splash-proof full-travel keyboard, the DRO 300 is exceptionally well-suited for use in a workshop. It supports all operations with intuitive interactive menus on its large, easy-to-read color flat-panel display.

Functions



The DRO 300 has the same functions as the DRO 203.

In addition, the DRO 300 offers a connection for the KT 130 edge finder. This allows you to define presets and datums with speed and precision. The DRO 300 digital readout supports you with special probing functions.

In addition, the DRO 300 is programmable, which makes it ideal for small-batch production on conventional machine tools. The DRO 300 allows you to store up to eight programs, each with up to 250 working steps. Programs are created by either keying them in step by step or by generating them using actual position capture (teach-in programming).

Data interfaces

A USB port enables the writing and reading out of data and files.

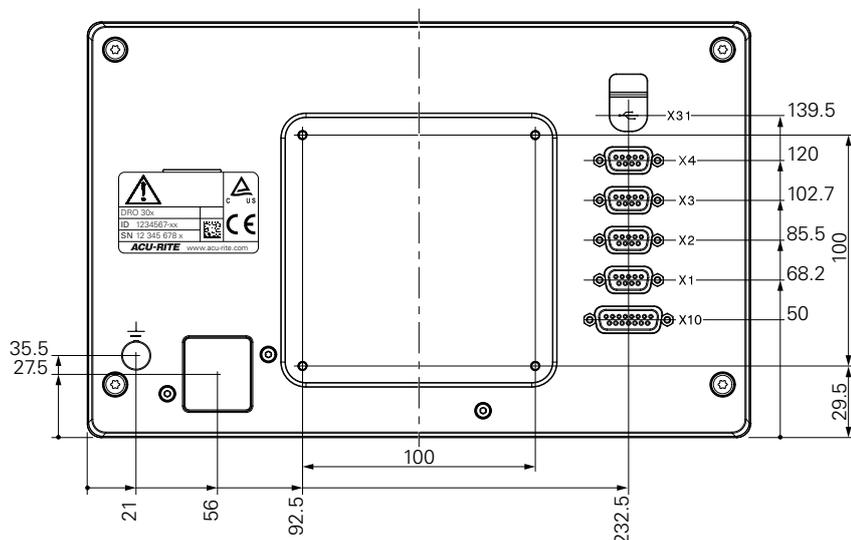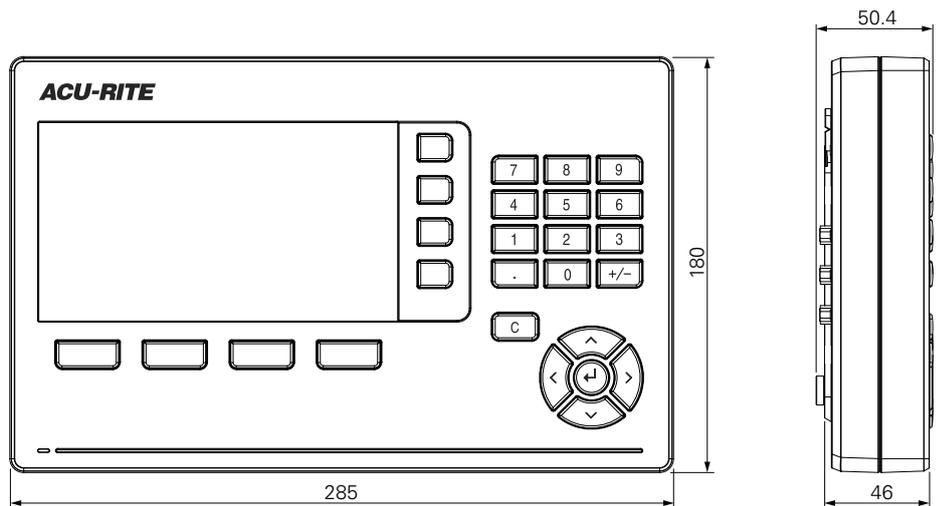

mm

 Tolerancing ISO 8015
 ISO 2768 - m H
 ≤ 6 mm: ±0.2 mm

DRO 300	
Axes	3 or 4; various axis designations
Encoder inputs	□□ TTL
Display step¹⁾	Adjustable, max. 7 digits <i>Linear axis:</i> 1 mm to 0.0001 mm <i>Rotary axis:</i> 1° to 0.001° (00° 00' 01")
Display	7" TFT color screen (15:9); resolution 800 x 400 pixels for position values and dialog
Status display	Tool, reference point, operating function, feed rate, ABS/INC, mm/inch, stopwatch
Axis display	Switchable between DRO1 and DRO2
Functions	<ul style="list-style-type: none"> • 10 reference points • 99 tools • REF reference-mark evaluation for distance-coded or single reference marks • Distance-to-go mode • Scaling factor • mm/inch switching • Absolute-incremental display • Integrated help function • Graphic positioning aid ("near zero" warning) • Calculator
For milling/drilling/boring	<ul style="list-style-type: none"> • Calculation of positions for hole patterns (bolt circles, linear hole patterns) • Tool radius and tool length compensation • Probing functions for reference-point acquisition with KT edge finder: "Edge," "Centerline" and "Circle center" • Oblique line, circular arc • Linear hole patterns, bolt hole circles
For turning	<ul style="list-style-type: none"> • Taper calculator • Radius/diameter switching • Freezing the tool position for back-off • Vectoring: X/Y display of the traverse path with inclined top slide • Sum display for Z and Z_O (axis coupling)
Programming	8 programs with up to 250 steps
Error compensation	<ul style="list-style-type: none"> • <i>Axis error:</i> Linear and multipoint over up to 200 points • <i>Backlash compensation:</i> for compensation of reversal error
Data interface	USB connection, Type C
Switching I/O	<ul style="list-style-type: none"> • Input for edge finder • Further inputs/outputs over the IOB 610 external input/output unit
Accessories	Stand, holder for mounting arm, protective cover, KT 130 edge finder (for milling)
Power connection	AC 100 V (-10 %) to 240 V (+5 %), 50 Hz to 60 Hz (±5 %), ≤ 33 W
Operating temperature	0 °C to 45 °C (storage temperature -20 °C to 70 °C)
Protection EN 60529	IP 40; front panel IP 54
Mass	1.7 kg

¹⁾ Depends on the signal period of the connected encoder

Accessories


– Edge finder

KT 130 edge finder

For any workpiece materials
With spiral cable
ID 283273-S1

The KT 130 is a 3-D triggering edge finder. This means it can also be used for nonconducting materials. The stylus is deflected when it contacts the workpiece, and the edge finder sends a triggering signal over the cable to the DRO 300 digital readout.

The KT 130 edge finder allows you to set reference points quickly and easily, without leaving marks on the workpiece.

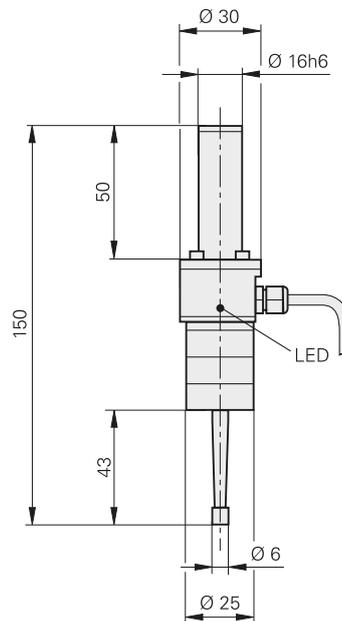

– Mounting components

The back panel of the digital displays has a VESA-MIS 100 standard mounting interface. There are several possible mounting configurations:



- Single-Pos stand
- Mounting frame
- Mounting arm with holder

Accessories:

- **Stand**
ID 1197273-01
- **Mounting arms**
(refer to page 18)
- **Mounting frame**
(accessory for DRO 203 and DRO 300)
ID 1197274-01

For mounting the digital readout in a housing or operating panel.

- **Holder for mounting arm**
ID 1197273-02
Is needed if a replacement unit is mounted to an already existing mounting arm.

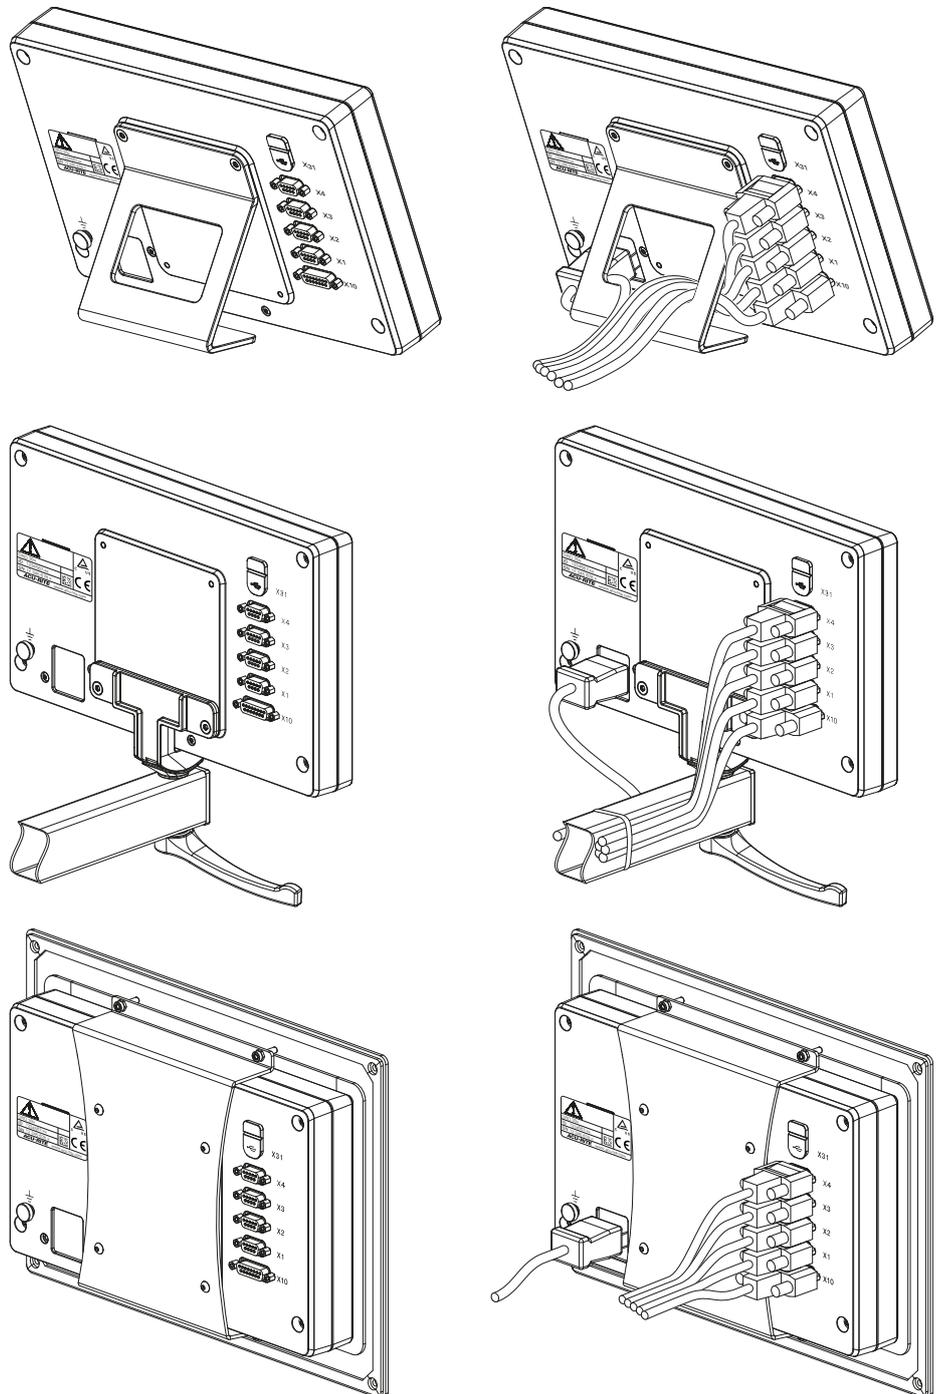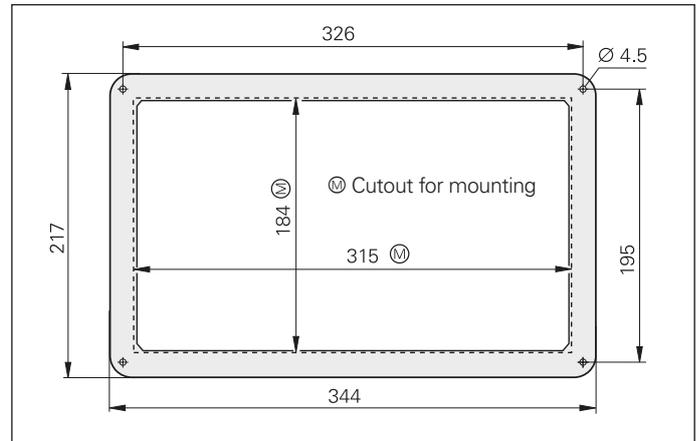

– Mounting components

You can use the mounting arm to easily place the display at a conveniently operable position. It can be attached to the machine either with a mounting bracket or directly. The display can also be swiveled with the holder mounted on the mounting arm.


Mounting arm A

Short version: 300 mm

ID 1223631-01


Long version: 670 mm

ID 1223636-01

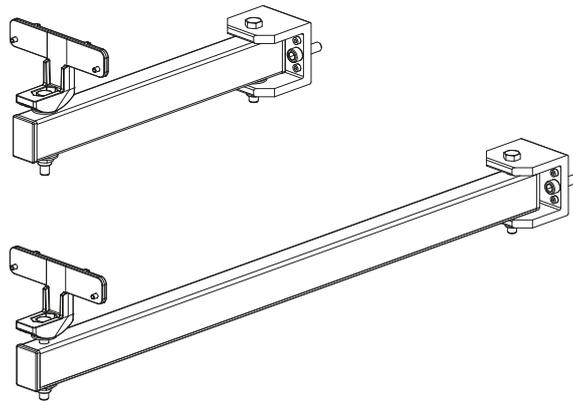


Mounting arm B

ID 1223632-01

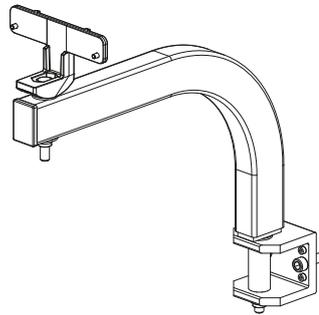


Mounting arm C

ID 1223637-01

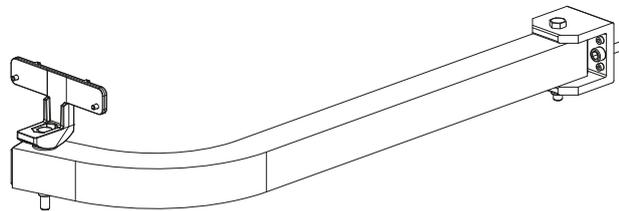

Mounting arm D

ID 1223634-01

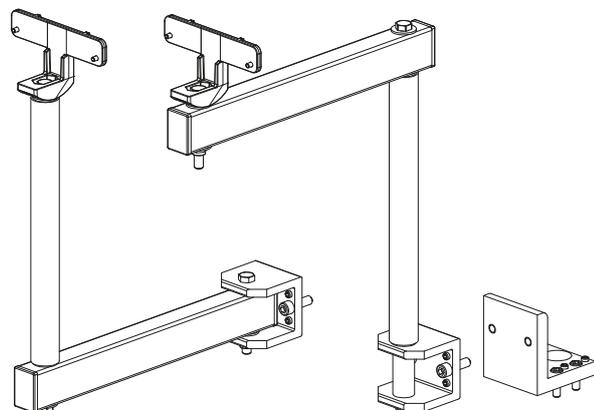

U-section beam with holder

Fits mounting arms A and B

ID 1223635-01



– IOB 610 external input/output unit for DRO 300

The DRO 300 provides application-dependent additional functions that can be used when the IOB 610 external input/output unit is connected.

IOB 610 external input/output unit

ID 1197271-01

The IOB 610 input/output unit is attached to a standard NS 35 rail (DIN 46 227 or EN 50 022).

It is connected to the DRO 300 using the touch probe input. LEDs show the power supply, the data transmission and the status of the inputs and outputs.


Accessories:

Connecting cable complete with connectors, between IOB 610 and DRO 300
ID 1226509-xx

Distribution cable complete with connectors, for parallel connection of IOB 610 and KT 130 on DRO 300
ID 1226398-01

The additional functions can be configured on the DRO 300 when the IOB 610 is connected.

	IOB 610
6 switching inputs	Zero reset of axes 1 to 4 (for milling applications) Recognition of max. 4 gear ranges (for turning applications) External activation of CSS (for turning applications)
10 switching outputs	9 relay outputs as switching functions (for milling applications) 1 relay output for readiness
1 analog output	0 V to 10 V <i>Turning mode:</i> For constant surface speed <i>Milling mode:</i> For controlling the spindle speed
Voltage supply	Via DRO 300
Cable length	≤ 4 m to DRO 300
Storage temperature	20 °C to 70 °C
Operating temperature	0 °C to 45 °C

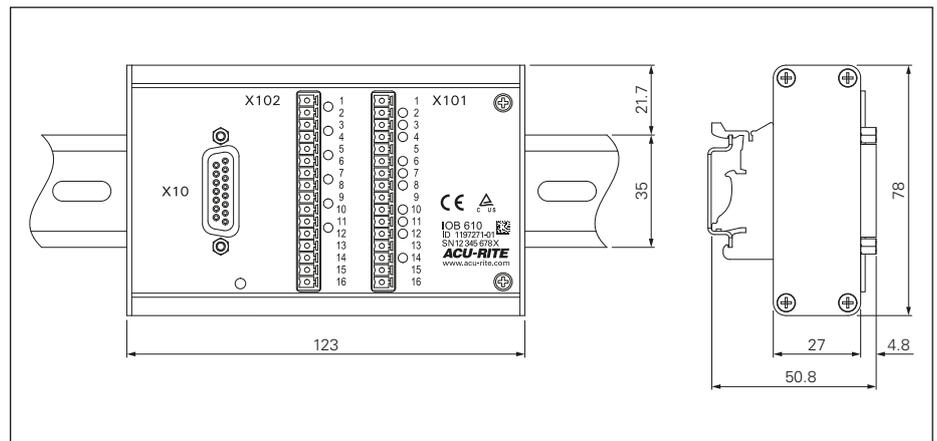

Switching inputs

The switching inputs are active when a HIGH signal (contact or pulse) is present. They are isolated and can be supplied externally or internally.

Signal level of the switching outputs

$$0V \leq U_L \leq 1.5V$$

$$4.5V \leq U_H \leq 26V$$

$$I_L \leq 25\text{ mA}$$


$$t_{\min} \geq 100\text{ ms}$$

Zero reset

In the milling mode, each axis can be set to the display value 0 over an external signal.

Detection of gear ranges

In turning mode, four switching inputs are available for the recognition of gear stages.

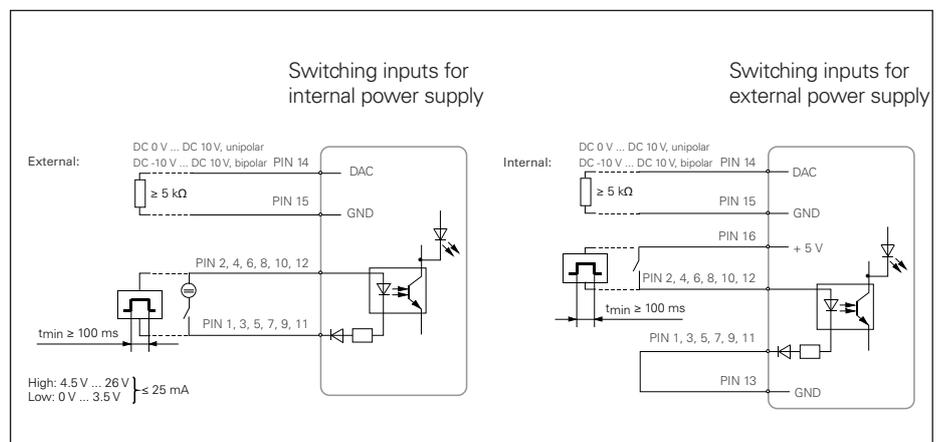

Switching outputs

The IOB 610 features ten floating relay outputs.

Standby

The standby output is at LOW level if the DRO 300 cannot operate the IOB (e.g., not switched on, cable disconnected, etc.).

Switching functions (for milling applications)

One or more switching ranges or switching points can be defined for an axis. The **switch-off ranges** are located symmetrically around the display value 0. If **switching points** are used, the relay activates when the position display reaches a specific value. The **direction** function switches when the algebraic sign is changed.

You can set whether

- the switching function should apply to the actual value or distance-to-go mode,
- the relay will open or close when the condition is met
- or the relay remains activated as long as the switching condition is met (continuous mode) or for a specified duration (pulsed mode).

Analog output

Constant surface cutting speed CSS





(only in turning applications)

CSS provides spindle speed control as the diameter of the workpiece changes. A speed command signal is sent to the inverter of the spindle motor via the analog interface (DAC 0 V to 10 V) of the IOB 610. The maximum and minimum permissible spindle speeds can be specified. In addition, a maximum of three operating gears can be taken into account. The DRO 300 recognizes the current gear stage by means of the switching inputs of the IOB 610. CSS control can also be started remotely (via an input to the CSS board) with an external switch.

Controlling the spindle speed

(only in milling applications)

With the analog outputs, the speed of the spindle on milling machines can be controlled in an open controlled loop. A spindle speed can be assigned to each tool defined in the tool table. The speed can be manually adapted during machining.

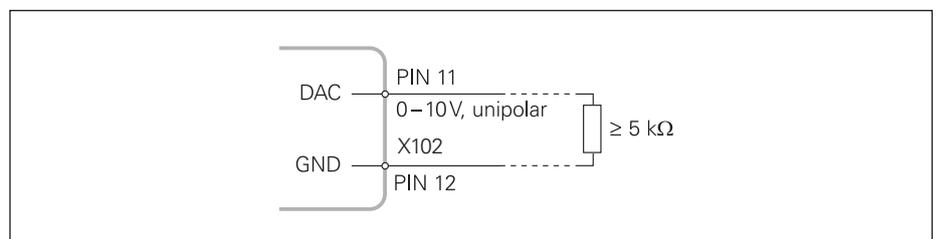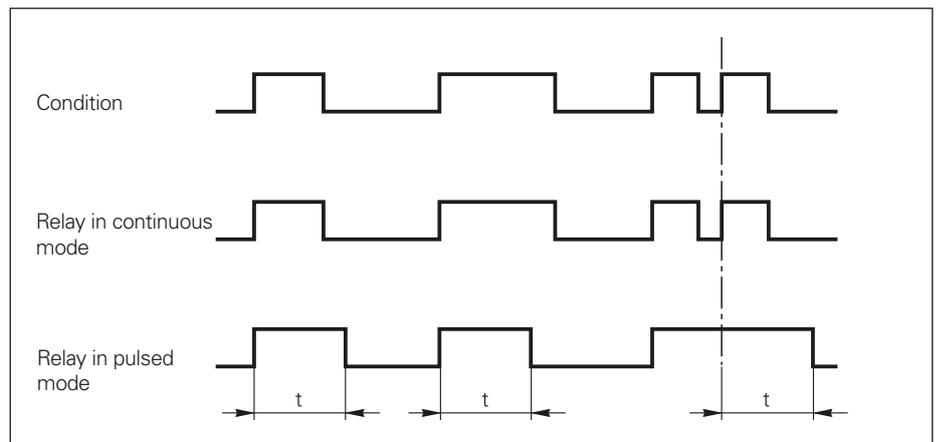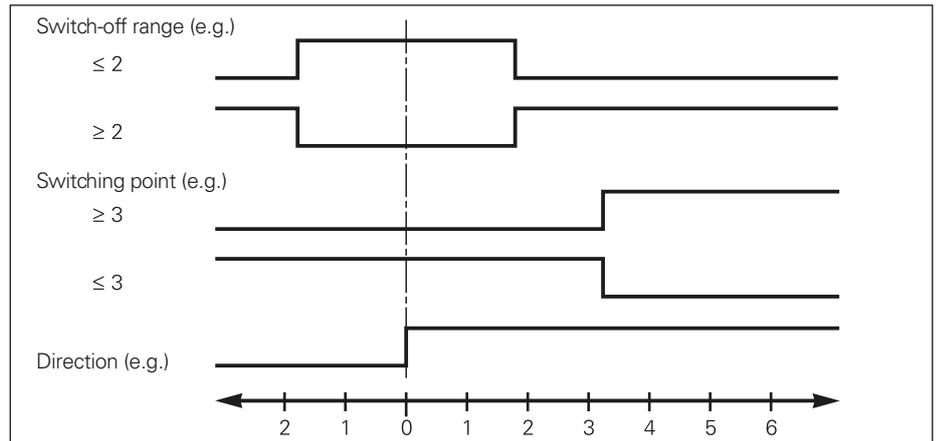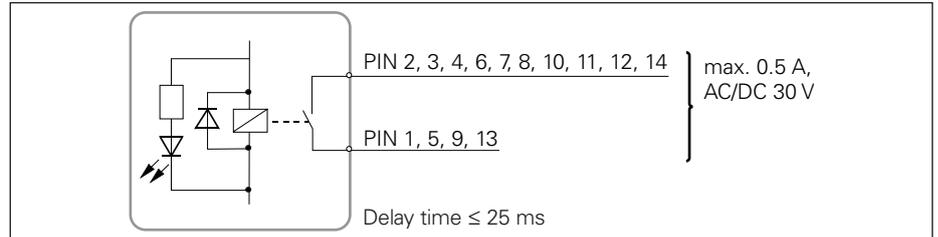


Interfaces

– Digital readouts

Pin layout of encoders \square TTL

Mating connector:
9-pin D-sub connector (male)

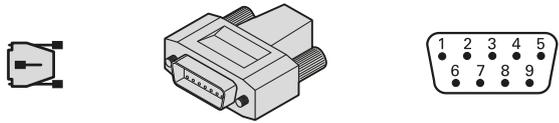


	Voltage supply		Incremental signals						Others
	7	6	2	3	4	5	8	9	1
\square TTL	U_P	$0V$	U_{a1}	\overline{U}_{a1}	U_{a2}	\overline{U}_{a2}	U_{a0}	\overline{U}_{a0}	/

Shield on housing; U_P = Power supply voltage

KT 130 edge finder and IOB 610 (only DRO 300)

A 15-pin D-sub connection is provided for connecting the KT 130 and the IOB 610.

The trigger signal from the edge finder can also start **data output** (adjustable by parameter).

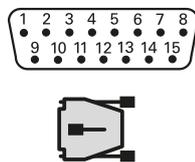

Pin	Assignment
6	5 V
1	0 V (inner shield)
7, 8, 15	0 V
2	Standby
13	Trigger signal
Remaining pins	Do not assign
Housing	External shield
3	Signal LOW
9	Signal HIGH
12	Read values contact
14	Read values pulse

USB

The digital readouts have a USB interface with a Type C port.

Linear Encoders

– For manually operated machine tools

For typical applications on manually operated machine tools, such as milling machines or lathes, **display steps of 10 µm** are sufficient. This is provided by the linear encoder of the SENC 50 and SENC 150 series without interpolation.

Jig boring machines, grinding machines, and measuring and inspection tasks normally require **display steps of 1 µm** and better. The SENC 50 and SENC 150 with integral 5-fold or 10-fold interpolation are suitable for these higher requirements.

For **limited installation space**, for example on the slide of a lathe, the SENC 50 linear encoder may be the best solution.

The SENC 150 linear encoders are used as universal linear encoders under **normal mounting conditions**.



Mounting instructions

SENC 50

This linear encoder with small cross section is fastened at points on a machined surface. With a back-up spar, only two points, one at each end, are sufficient.

For mounting without back-up spar, an intermediate support is required in addition. The encoder is mounted so that the sealing lips are directed downward or away from splash water.

Assembly

When mounting, the scale unit must be aligned at several points along the machine guideway. Stop surfaces or stop pins can also be used to align the scale.


The proper gap between the scale housing and scanning unit is ensured by the shipping brace. You must also ensure that the lateral tolerance is maintained.

Accessories

Back-up spar for SENC 50

ID 680803-xx

The SENC 50 can be mounted on a back-up spar to increase stability.

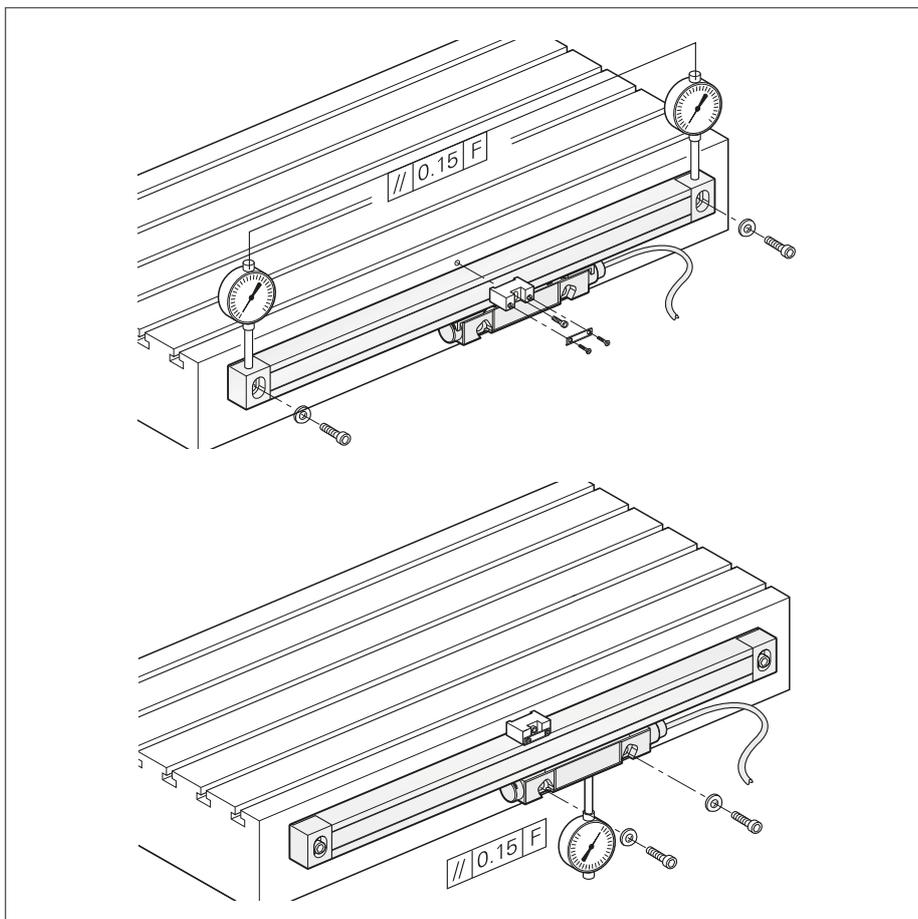

SENC 150

The SENC 150 is fastened at its ends by their mounting blocks to a machined surface. A support bracket is provided for measuring lengths above 625 mm.

If the SENC 150 is mounted with a back-up spar, there is no need for the support bracket. At measuring lengths of 1675 mm or more, the back-up spar is absolutely necessary. The encoder is mounted so that the sealing lips are directed downward or away from splash water.

Assembly


When the SENC 150 is mounted, the shipping brace already ensures the proper gap between the scale unit and the scanning unit. You need only align the scale unit at several points along the machine guideway.

Accessories

Back-up spar for SENC 150

ID 680116-xx


The SENC 150 can be mounted on a back-up spar to increase stability. At measuring lengths of 1675 mm or more, the back-up spar is absolutely necessary and is already included in delivery.

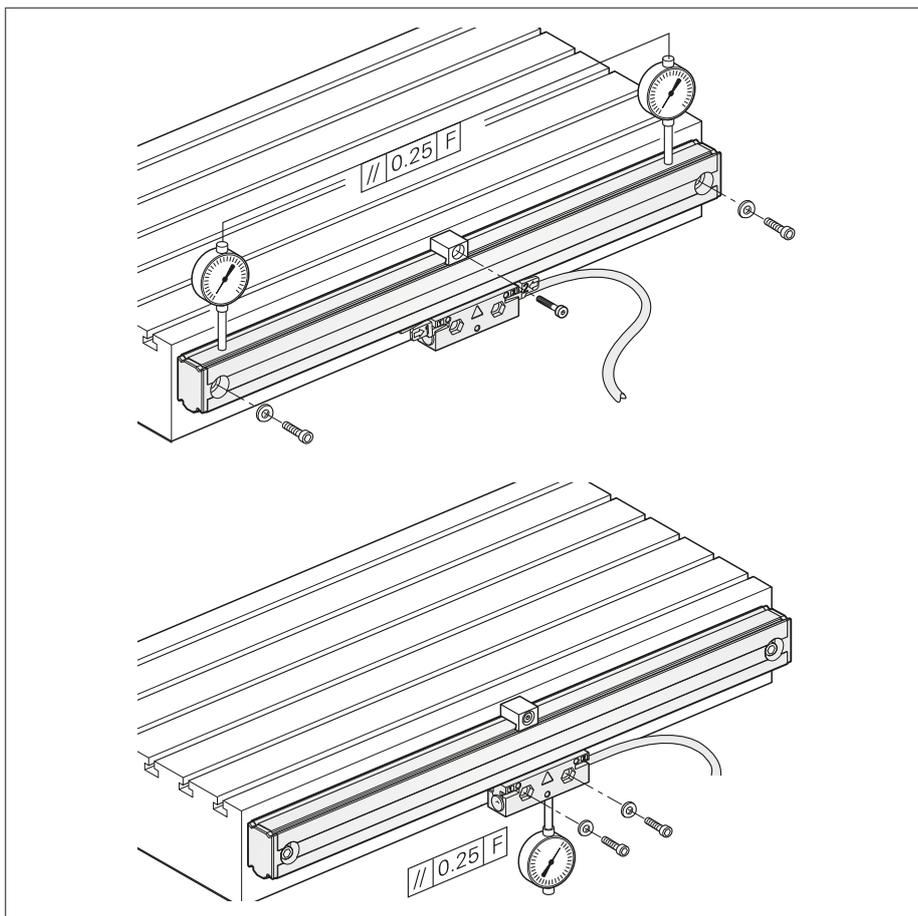

SENC 50

Incremental linear encoder

- Extremely compact dimensions
- Measuring steps 5 μm to 0.5 μm

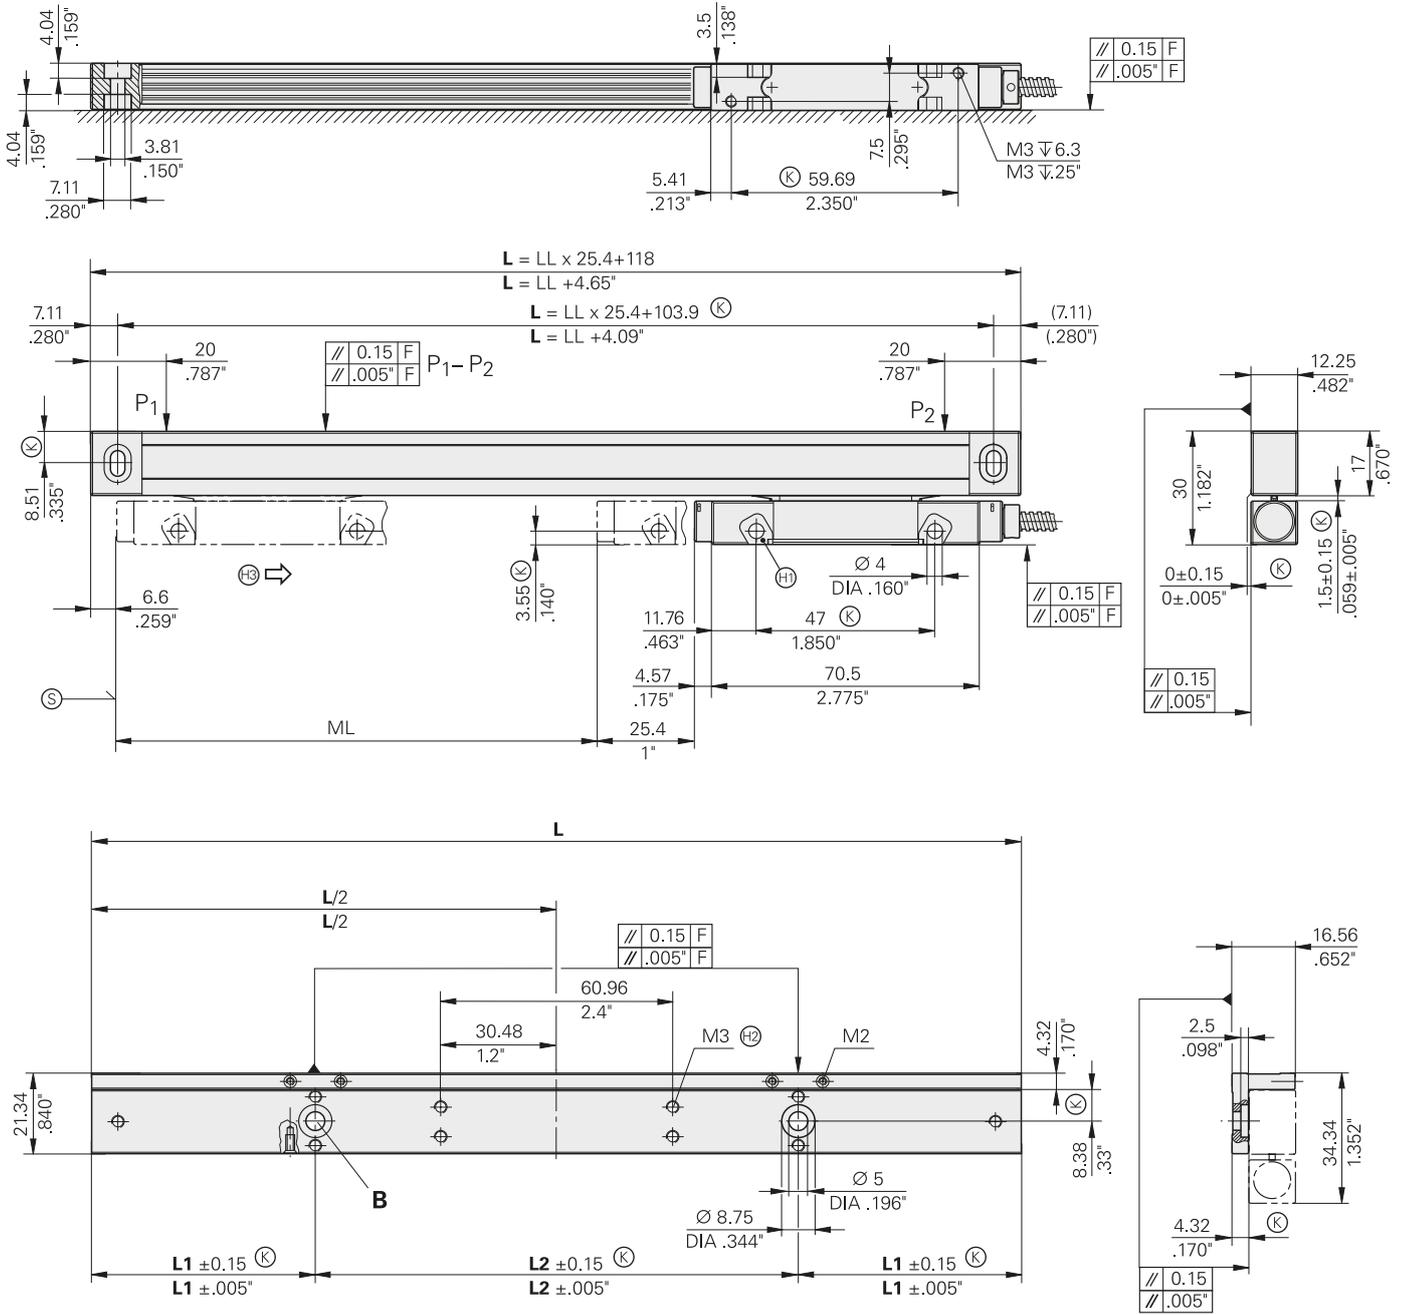

Tolerancing ISO 8015
 Dimensions without
 tolerance ± 0.2 mm
 (± 0.008 inches)

- ML = Measuring length
 P = Gauging points for alignment
 ⊕ = Beginning of measuring length
 ⊙ = Required mating dimensions
 ⊕ = M4 nut usable
 ⊕ = For aligning the back-up spar
 ⊕ = Direction of scanning head motion for output signals in accordance with interface description

ML (mm)	LL (inch)	L	L1	L2	Qty. B
50	1	143.5/5.65"	20.96/0.825"	101.6/4"	2x
75	2	168.9/6.65"	20.96/0.825"	127.0/5"	2x
100	3	194.3/7.65"	33.66/1.325"	127.0/5"	2x
125	4	219.7/8.65"	46.36/1.825"	127.0/5"	2x
150	5	245.1/9.65"	59.06/2.325"	127.0/5"	2x
175	6	270.5/10.65"	71.76/2.825"	127.0/5"	2x
200	7	295.9/11.65"	84.46/3.325"	127.0/5"	2x
225	8	321.3/12.65"	97.16/3.825"	127.0/5"	2x
250	9	346.7/13.65"	46.36/1.825"	127.0/5"	3x
275	10	372.1/14.65"	59.06/2.325"	127.0/5"	3x
300	11	397.5/15.65"	71.76/2.825"	127.0/5"	3x
325	12	422.9/16.65"	84.46/3.325"	127.0/5"	3x
350	13	448.3/17.65"	97.16/3.825"	127.0/5"	3x
375	14	473.7/18.65"	46.36/1.825"	127.0/5"	4x
425	16	524.5/20.65"	71.76/2.825"	127.0/5"	4x
475	18	575.3/22.65"	33.66/1.325"	254.0/10"	3x
525	20	626.1/24.65"	59.06/2.325"	254.0/10"	3x




Specifications	SENC 50		
Measuring standard	Glass scale with incremental graduation		
Accuracy grade	±3 µm		
Measuring length ML*	Mounting spar* optional 50 75 100 125 150 175 200 225 250 275 300 325 350 375 425 475 525		
Incremental signals*	□ TTL	□ TTL x 5	□ TTL x 10
Grating period Integrated interpolation Signal period	20 µm Without 20 µm	20 µm 5-fold 4 µm	20 µm 10-fold 2 µm
Measuring step¹⁾	5 µm	1 µm	0.5 µm
Reference marks	Distance-coded		
Voltage supply Without load	DC 5.1 V ±0.1 V/< 180 mA	DC 5.1 V ±0.1 V/< 220 mA	
Electrical connection	Cable in metal armor, with 9-pin D-sub connector; length: 3 m		
Cable length	≤ 6 m (total length with ACU-RITE cable)		
Traversing speed	≤ 60 m/min		
Required moving force	≤ 2.2 N		
Operating conditions	Temperature 0 °C to 50 °C; humidity 25 % to 95 % (non-condensing)		
Conditions for storage	Temperature -20 °C to 70 °C; humidity 20 % to 95 % (non-condensing)		
Protection EN 60529	IP53 when mounted as per Mounting Instructions		
Mass	0.5 kg + 0.3 kg/m measuring length		

* Please indicate when ordering ¹⁾ After 4-fold evaluation in the subsequent electronics

SENC 150

Incremental linear encoder

- Sturdy design
- Measuring lengths up to 3 m
- Measuring steps 5 μm to 0.5 μm

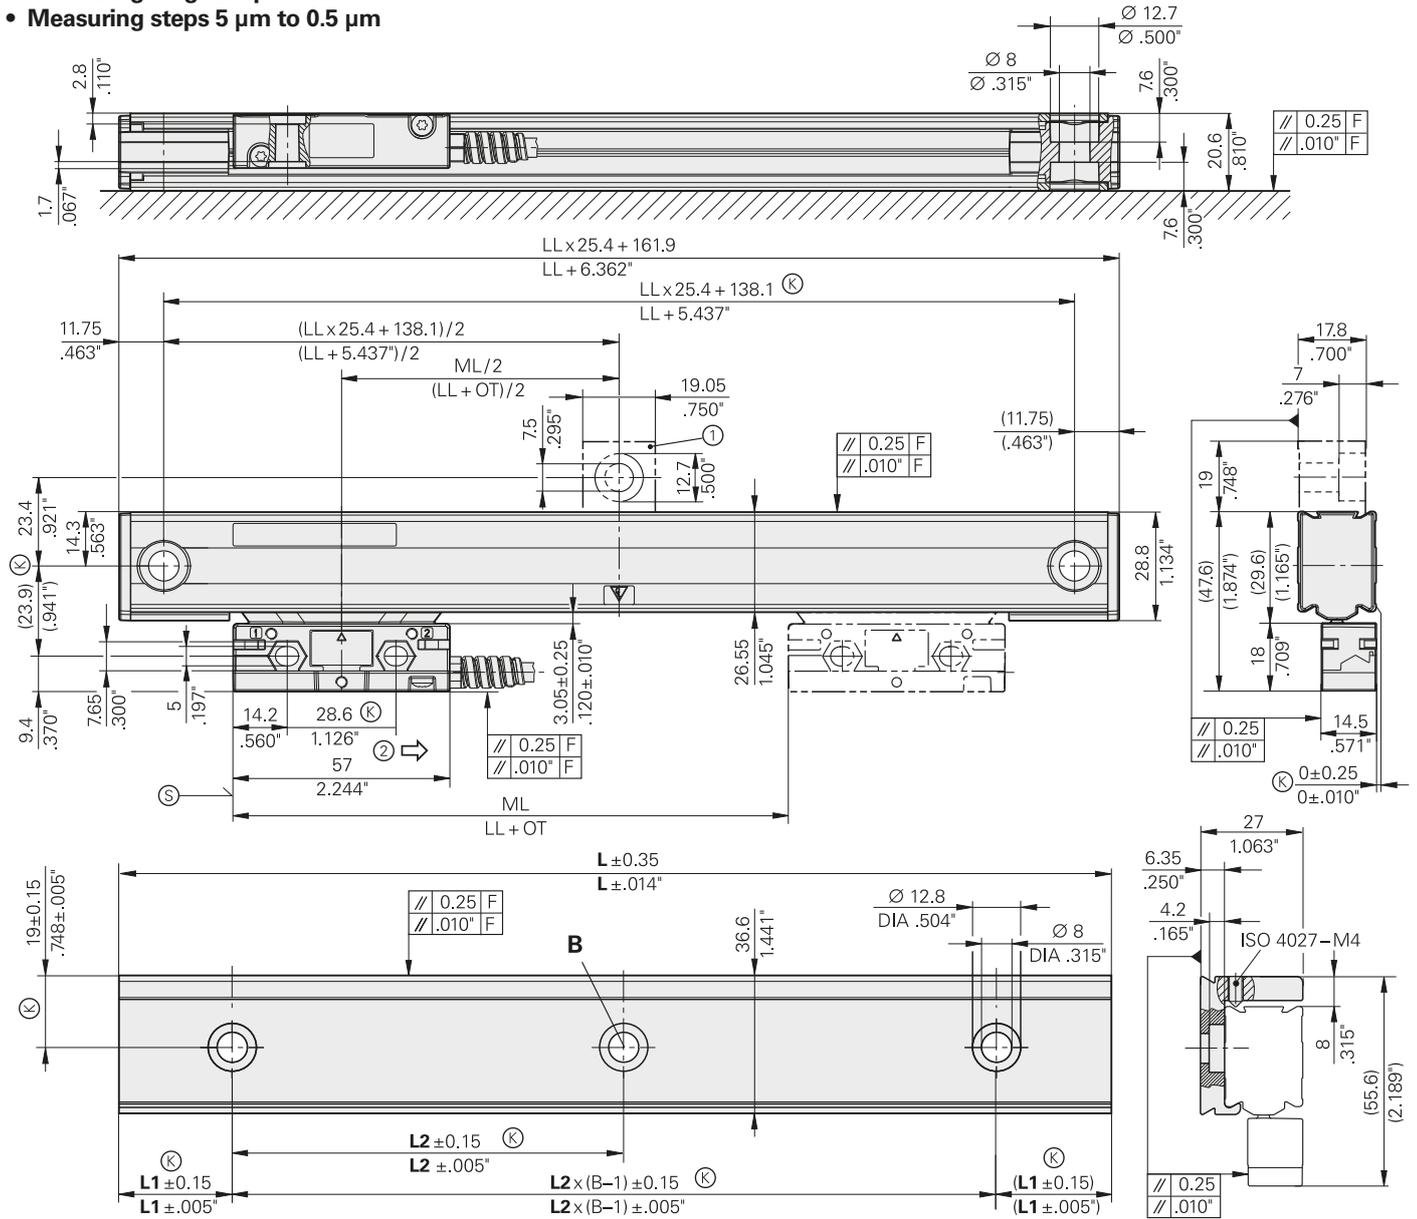


Tolerancing ISO 8015
 Dimensions without tolerance ± 0.2 mm (± 0.008 inches)
 F = Machine guideway
 ML = Measuring length in mm
 LL = Measuring length in inches
 OT = Overrun 1.75"

= Beginning of measuring dimensions
 = Required mating dimensions
 1 = ML ≥ 625 mm/24 inches to ≤ 1550 mm/60 inches use mid-point fastening
 2 = Direction of scanning head motion for output signals in accordance with interface description

ML	LL	L	L1	L2	B
50	1"	185.5 / 7.303"	29.25 / 1.152"	127 / 5"	2x
75	2"	211.5 / 8.327"	42.25 / 1.663"	127 / 5"	2x
100	3"	236.5 / 9.311"	54.75 / 2.156"	127 / 5"	2x
125	4"	261.5 / 10.295"	67.25 / 2.648"	127 / 5"	2x
150	5"	287.5 / 11.319"	80.25 / 3.159"	127 / 5"	2x
175	6"	312.5 / 12.303"	29.25 / 1.152"	254 / 10"	2x
200	7"	338.5 / 13.327"	42.25 / 1.663"	254 / 10"	2x
225	8"	363.5 / 14.311"	54.75 / 2.156"	254 / 10"	2x
275	10"	414.5 / 16.319"	80.25 / 3.159"	254 / 10"	2x
300	11"	439.5 / 17.303"	92.75 / 3.652"	254 / 10"	2x
325	12"	465.5 / 18.327"	105.75 / 4.163"	254 / 10"	2x
350	13"	490.5 / 19.311"	36.6 / 1.441"	417.3 / 16.43"	2x
375	14"	515.5 / 20.295"	130.75 / 5.148"	254 / 10"	2x
400	15"	541.5 / 21.319"	16.75 / 0.659"	254 / 10"	3x
425	16"	566.5 / 22.303"	29.25 / 1.152"	254 / 10"	3x
475	18"	617.5 / 24.311"	54.75 / 2.156"	254 / 10"	3x
525	20"	668.5 / 26.319"	80.25 / 3.159"	254 / 10"	3x
575	22"	719.5 / 28.327"	105.75 / 4.163"	254 / 10"	3x
600	23"	744.5 / 29.311"	118.25 / 4.656"	254 / 10"	3x
625	24"	769.5 / 30.295"	130.75 / 5.148"	254 / 10"	3x

ML	LL	L	L1	L2	B
675	26"	820.5 / 32.303"	29.25 / 1.152"	254 / 10"	4x
725	28"	871.5 / 34.311"	54.75 / 2.156"	254 / 10"	4x
775	30"	922.5 / 36.319"	80.25 / 3.159"	254 / 10"	4x
875	33"	998.5 / 39.311"	118.25 / 4.656"	254 / 10"	4x
925	35"	1049.5 / 41.319"	11.25 / 0.443"	256.8 / 10.109"	5x
950	36"	1074.5 / 42.303"	29.25 / 1.152"	254 / 10"	5x
1000	38"	1125.5 / 44.311"	54.75 / 2.156"	254 / 10"	5x
1050	40"	1176.5 / 46.319"	80.25 / 3.159"	254 / 10"	5x
1100	42"	1227.5 / 48.327"	105.75 / 4.163"	254 / 10"	5x
1250	48"	1379.5 / 54.311"	54.75 / 2.156"	254 / 10"	6x
1350	52"	1481.5 / 58.327"	105.75 / 4.163"	254 / 10"	6x
1400	54"	1531.5 / 60.295"	130.75 / 5.148"	254 / 10"	6x
1550	60"	1684.5 / 66.319"	80.25 / 3.159"	254 / 10"	7x
1675	65"	1811.5 / 71.319"	143.75 / 5.659"	254 / 10"	7x
1850	72"	1989.5 / 78.327"	105.75 / 4.163"	254 / 10"	8x
2000	78"	2141.5 / 84.311"	54.75 / 2.156"	254 / 10"	9x
2150	84"	2293.5 / 90.295"	130.75 / 5.148"	254 / 10"	9x
2300	90"	2446.5 / 96.319"	80.25 / 3.159"	254 / 10"	10x
2575	100"	2700.5 / 106.319"	80.25 / 3.159"	254 / 10"	11x
2825	110"	2954.5 / 116.319"	80.25 / 3.159"	254 / 10"	12x
3075	120"	3208.5 / 126.319"	80.25 / 3.159"	254 / 10"	13x

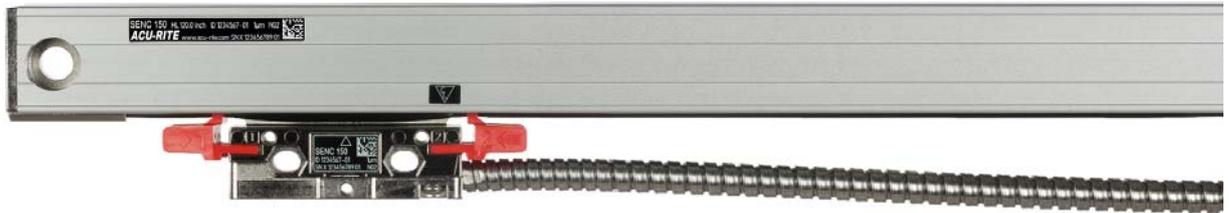

SENC 150				
Measuring standard	Glass scale with incremental graduation			
Accuracy grade	±5 µm			
Measuring length ML*	Mounting spar* optional 50 75 100 125 150 175 225 275 300 325 350 375 400 425 475 525 625 675 725 775 825 875 925 950 1000 1050 1100 1250 1350 1400 1550 Back-up spar included in items supplied 1675 1850 2000 2150 2300 2575 2825 3075			
Incremental signals*	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 33%; text-align: center;">□ □ TTL</td> <td style="width: 33%; text-align: center;">□ □ TTL x 5</td> <td style="width: 33%; text-align: center;">□ □ TTL x 10</td> </tr> </table>	□ □ TTL	□ □ TTL x 5	□ □ TTL x 10
□ □ TTL	□ □ TTL x 5	□ □ TTL x 10		
Grating period	20 µm			
Integrated interpolation	Without			
Signal period	20 µm			
Measuring step¹⁾	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 33%;">5 µm</td> <td style="width: 33%;">1 µm</td> <td style="width: 33%;">0.5 µm</td> </tr> </table>	5 µm	1 µm	0.5 µm
5 µm	1 µm	0.5 µm		
Reference marks	Distance-coded			
Voltage supply Without load	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">DC 5.1 V ±0.1 V/< 180 mA</td> <td style="width: 50%;">DC 5.1 V ±0.1 V/< 220 mA</td> </tr> </table>	DC 5.1 V ±0.1 V/< 180 mA	DC 5.1 V ±0.1 V/< 220 mA	
DC 5.1 V ±0.1 V/< 180 mA	DC 5.1 V ±0.1 V/< 220 mA			
Electrical connection	Cable in metal armor, with 9-pin D-sub connector; length: 4 m <i>1250 mm measuring length or more: length 6 m</i>			
Cable length	≤ 9 m (total length with ACU-RITE cable)			
Traversing speed	≤ 60 m/min			
Required moving force	≤ 3.4 N			
Operating conditions	Temperature 0 °C to 50 °C; humidity 25 % to 95 % (non-condensing)			
Conditions for storage	Temperature -20 °C to 70 °C; humidity 20 % to 95 % (non-condensing)			
Protection EN 60529	IP53 when mounted as per Mounting Instructions			
Mass	0.65 kg + 0.7 kg/m measuring length			

* Please indicate when ordering ¹⁾ After 4-fold evaluation in the subsequent electronics

Interfaces


Incremental signals TTL

ACU-RITE encoders with  TTL interface incorporate electronics that digitize sinusoidal scanning signals with or without interpolation.

The **incremental signals** are transmitted as the square-wave pulse trains U_{a1} and U_{a2} , phase-shifted by 90° elec. The **reference mark signal** consists of one or more reference pulses U_{a0} , which are gated with the incremental signals. In addition, the integrated electronics produce their **inverse signals** $\overline{U_{a1}}$ and $\overline{U_{a2}}$ for noise-proof transmission. The illustrated sequence of output signals—with U_{a2} lagging U_{a1} —applies to the direction of motion shown in the dimension drawing.

The distance between two successive edges of the incremental signals U_{a1} and U_{a2} through 1-fold, 2-fold or 4-fold evaluation is one **measuring step**. The subsequent electronics must be designed to detect each edge of the square-wave pulse.

Interface	Square-wave signals  TTL
Incremental signals	Two TTL square-wave signals U_{a1} , U_{a2} and their inverted signals $\overline{U_{a1}}$, $\overline{U_{a2}}$
Reference mark signal	One or more square-wave pulses U_{a0} and their inverted pulses $\overline{U_{a0}}$
Pulse width	90° elec.
Signal level	Differential line driver as per EIA standard RS-422 $U_H \geq 2.5 \text{ V}$ at $-I_H = 20 \text{ mA}$ $U_L \leq 0.5 \text{ V}$ at $I_L = 20 \text{ mA}$

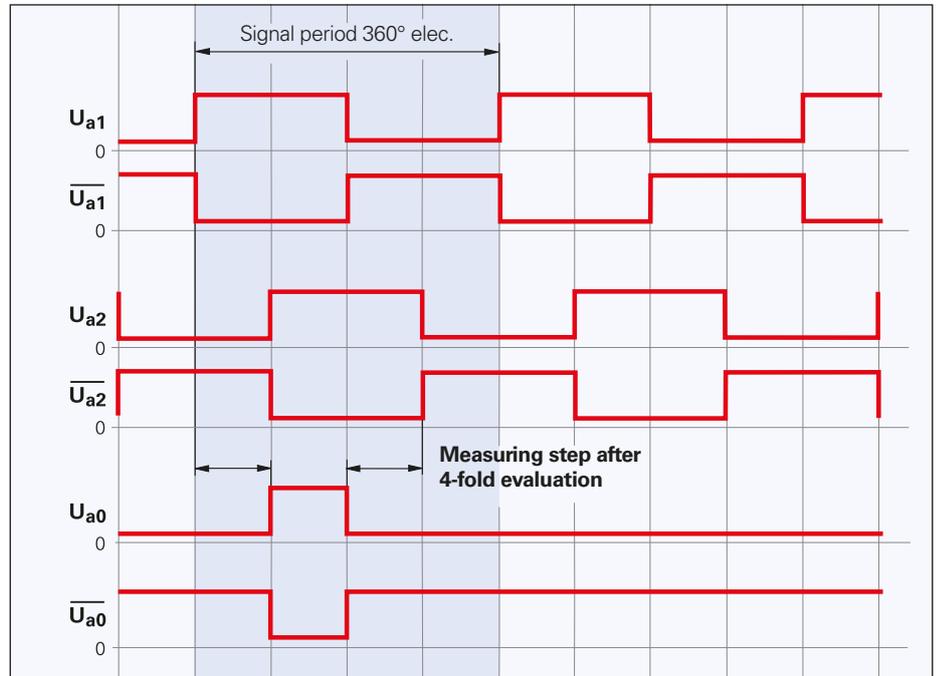

Electrical connection

Cables

Extension cables for SENC

ACU-RITE linear encoders feature cables with D-sub connector for direct connection to ACU-RITE digital readouts. The exact length of the cable can be found in the Specifications. If the cable length is insufficient, extension cables are offered complete with connectors.

Upon request you can also order adapter cables for connection to discontinued ACU-RITE products.

Extension cable		Length	In metal armor	Without metal armor
Complete with D-sub connector (female) and D-sub connector (male)		1.5 m	683276-05	683277-05
		3.0 m	683276-10	683277-10
		4.5 m	683276-15	683277-15
		6.0 m	683276-20	683277-20
		7.5 m	683276-25	683277-25

Pin layout

9-pin D-sub connector On linear encoder or mating connector to digital readout									
	Voltage supply		Incremental signals						
PIN	7	6	2	3	4	5	9	8	1
Signal	U_P (V_{CC})	0V	U_{a1} (A+)	\overline{U}_{a1} (A-)	U_{a2} (B+)	\overline{U}_{a2} (B-)	U_{a0} (R-)	\overline{U}_{a0} (R+)	/
SENC 50 	Black	White	Green	Yellow	Pink	Red	Brown	Gray	/
SENC 150 	Brown	White	Green	Yellow	Blue	Red	Gray	Pink	/

Cable shield on housing; U_P = Voltage supply
 Unused pins or wires must not be assigned!
 Color assignment applies only to cable.

General electrical information

Transmission of measuring signals— electrical noise immunity

Noise voltages arise mainly through capacitive or inductive transfer. Electrical noise can be introduced into the system over signal lines and input or output terminals.

Possible sources of noise include:

- Strong magnetic fields from transformers and electric motors
- Relays, contactors and solenoid valves
- High-frequency equipment, pulse devices, and stray magnetic fields from switch-mode power supplies
- AC power lines and supply lines to the above devices

Protection against electrical noise

The following measures must be taken to ensure disturbance-free operation:

- Use only original ACU-RITE cables. Consider the voltage drop on supply lines
- Use connecting elements (such as connectors or terminal boxes) with metal housings. Only the signals and power supply of the connected encoder may be routed through these elements. Deviating applications with additional

signals in the connecting element require specific measures with regard to electrical safety and EMC.

- Connect the housings of the encoder, connecting elements and subsequent electronics through the shield of the cable. Connect the shield over a large area and in all directions (360°). For encoders with more than one electrical connection, refer to the documentation for the respective product
- For cables with multiple shields, the inner shields must be routed separately from the outer shield. Connect the inner shield to 0V of the subsequent electronics. Do not connect the inner shields with the outer shield, neither in the encoder nor in the cable
- Connect the shield to protective ground as per the mounting instructions
- Prevent contact of the shield (e.g. connector housing) with other metal surfaces. Pay attention to this when installing cables.
- Do not install signal cable in the direct vicinity of interference sources (inductive consumers such as contactors, motors, frequency inverters, solenoid valves, etc.)

- Sufficient decoupling from interference-signal-conducting cables can usually be achieved by an air clearance of 100 mm or, when cables are in metal ducts, by a grounded partition.
- A minimum spacing of 200 mm to inductors in switch-mode power supplies is required.
- If compensating currents are to be expected within the overall system, a separate equipotential bonding conductor must be provided. The shielding does not have the function of an equipotential bonding conductor
- Provide power only from PELV systems (**EN 50 178**) to the position encoders. Provide high-frequency grounding with low impedance (**EN 60204-1 Chap. EMV**).

HEIDENHAIN

DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany

☎ +49 8669 31-0

FAX +49 8669 32-5061

E-mail: info@heidenhain.de

www.heidenhain.de

Vollständige und weitere Adressen siehe www.heidenhain.de
For complete and further addresses see www.heidenhain.de

DE	HEIDENHAIN Vertrieb Deutschland 83301 Traunreut, Deutschland ☎ 08669 31-3132 FAX 08669 32-3132 E-Mail: hd@heidenhain.de	ES	FARRESA ELECTRONICA S.A. 08028 Barcelona, Spain www.farresa.es	PH	MACHINEBANKS' CORPORATION Quezon City, Philippines 1113 E-mail: info@machinebanks.com
	HEIDENHAIN Technisches Büro Nord 12681 Berlin, Deutschland ☎ 030 54705-240	FI	HEIDENHAIN Scandinavia AB 01740 Vantaa, Finland www.heidenhain.fi	PL	APS 02-384 Warszawa, Poland www.heidenhain.pl
	HEIDENHAIN Technisches Büro Mitte 07751 Jena, Deutschland ☎ 03641 4728-250	FR	HEIDENHAIN FRANCE sarl 92310 Sèvres, France www.heidenhain.fr	PT	FARRESA ELECTRÓNICA, LDA. 4470 - 177 Maia, Portugal www.farresa.pt
	HEIDENHAIN Technisches Büro West 44379 Dortmund, Deutschland ☎ 0231 618083-0	GB	HEIDENHAIN (G.B.) Limited Burgess Hill RH15 9RD, United Kingdom www.heidenhain.co.uk	RO	HEIDENHAIN Reprezentantă Romania Braşov, 500407, Romania www.heidenhain.ro
	HEIDENHAIN Technisches Büro Südwest 70771 Leinfelden-Echterdingen, Deutschland ☎ 0711 993395-0	GR	MB Milionis Vassilis 17341 Athens, Greece www.heidenhain.gr	RS	Serbia → BG
	HEIDENHAIN Technisches Büro Südost 83301 Traunreut, Deutschland ☎ 08669 31-1345	HK	HEIDENHAIN LTD Kowloon, Hong Kong E-mail: sales@heidenhain.com.hk	RU	OOO HEIDENHAIN 115172 Moscow, Russia www.heidenhain.ru
		HR	Croatia → SL	SE	HEIDENHAIN Scandinavia AB 12739 Skärholmen, Sweden www.heidenhain.se
AR	NAKASE SRL. B1653AOX Villa Ballester, Argentina www.heidenhain.com.ar	HU	HEIDENHAIN Kereskedelmi Képviselet 1239 Budapest, Hungary www.heidenhain.hu	SG	HEIDENHAIN PACIFIC PTE LTD Singapore 408593 www.heidenhain.com.sg
AT	HEIDENHAIN Techn. Büro Österreich 83301 Traunreut, Germany www.heidenhain.de	ID	PT Servitama Era Toolsindo Jakarta 13930, Indonesia E-mail: ptset@group.gts.co.id	SK	KOPRETINA TN s.r.o. 91101 Trenčín, Slovakia www.kopretina.sk
AU	FCR MOTION TECHNOLOGY PTY LTD Laverton North Victoria 3026, Australia E-mail: sales@fcrmotion.com	IL	NEUMO VARGUS MARKETING LTD. Holon, 58859, Israel E-mail: neumo@neumo-vargus.co.il	SL	NAVO d.o.o. 2000 Maribor, Slovenia www.heidenhain.si
BE	HEIDENHAIN NV/SA 1760 Roosdaal, Belgium www.heidenhain.be	IN	HEIDENHAIN Optics & Electronics India Private Limited Chetpet, Chennai 600 031, India www.heidenhain.in	TH	HEIDENHAIN (THAILAND) LTD Bangkok 10250, Thailand www.heidenhain.co.th
BG	ESD Bulgaria Ltd. Sofia 1172, Bulgaria www.esd.bg	IT	HEIDENHAIN ITALIANA S.r.l. 20128 Milano, Italy www.heidenhain.it	TR	T&M Mühendislik San. ve Tic. LTD. ŞTİ. 34775 Y. Dudullu – Umraniye-Istanbul, Turkey www.heidenhain.com.tr
BR	HEIDENHAIN Brasil Ltda. 04763-070 – São Paulo – SP, Brazil www.heidenhain.com.br	JP	HEIDENHAIN K.K. Tokyo 102-0083, Japan www.heidenhain.co.jp	TW	HEIDENHAIN Co., Ltd. Taichung 40768, Taiwan R.O.C. www.heidenhain.com.tw
BY	GERTNER Service GmbH 220026 Minsk, Belarus www.heidenhain.by	KR	HEIDENHAIN Korea LTD. Gasan-Dong, Seoul, Korea 153-782 www.heidenhain.co.kr	UA	Gertner Service GmbH Büro Kiev 02094 Kiev, Ukraine www.heidenhain.ua
CA	HEIDENHAIN CORPORATION Mississauga, Ontario L5T2N2, Canada www.heidenhain.com	MX	HEIDENHAIN CORPORATION MEXICO 20290 Aguascalientes, AGS., Mexico E-mail: info@heidenhain.com	US	HEIDENHAIN CORPORATION Schaumburg, IL 60173-5337, USA www.heidenhain.com
CH	HEIDENHAIN (SCHWEIZ) AG 8603 Schwerzenbach, Switzerland www.heidenhain.ch	MY	ISOSERVE SDN. BHD. 43200 Balakong, Selangor E-mail: sales@isoserve.com.my	VE	Maquinaria Diekmann S.A. Caracas, 1040-A, Venezuela E-mail: purchase@diekmann.com.ve
CN	DR. JOHANNES HEIDENHAIN (CHINA) Co., Ltd. Beijing 101312, China www.heidenhain.com.cn	NL	HEIDENHAIN NEDERLAND B.V. 6716 BM Ede, Netherlands www.heidenhain.nl	VN	AMS Co. Ltd HCM City, Vietnam E-mail: davidgoh@amsvn.com
CZ	HEIDENHAIN s.r.o. 102 00 Praha 10, Czech Republic www.heidenhain.cz	NO	HEIDENHAIN Scandinavia AB 7300 Orkanger, Norway www.heidenhain.no	ZA	MAFEMA SALES SERVICES C.C. Midrand 1685, South Africa www.heidenhain.co.za
DK	TPTEKNIK A/S 2670 Greve, Denmark www.tp-gruppen.dk	NZ	Llama ENGINEERING Ltd 5012 Wellington, New Zealand E-mail: info@llamaengineering.co.nz		

